

- The number shown in each ▶ is the page number where the part's function and/or use are explained in Japanese.


Front view

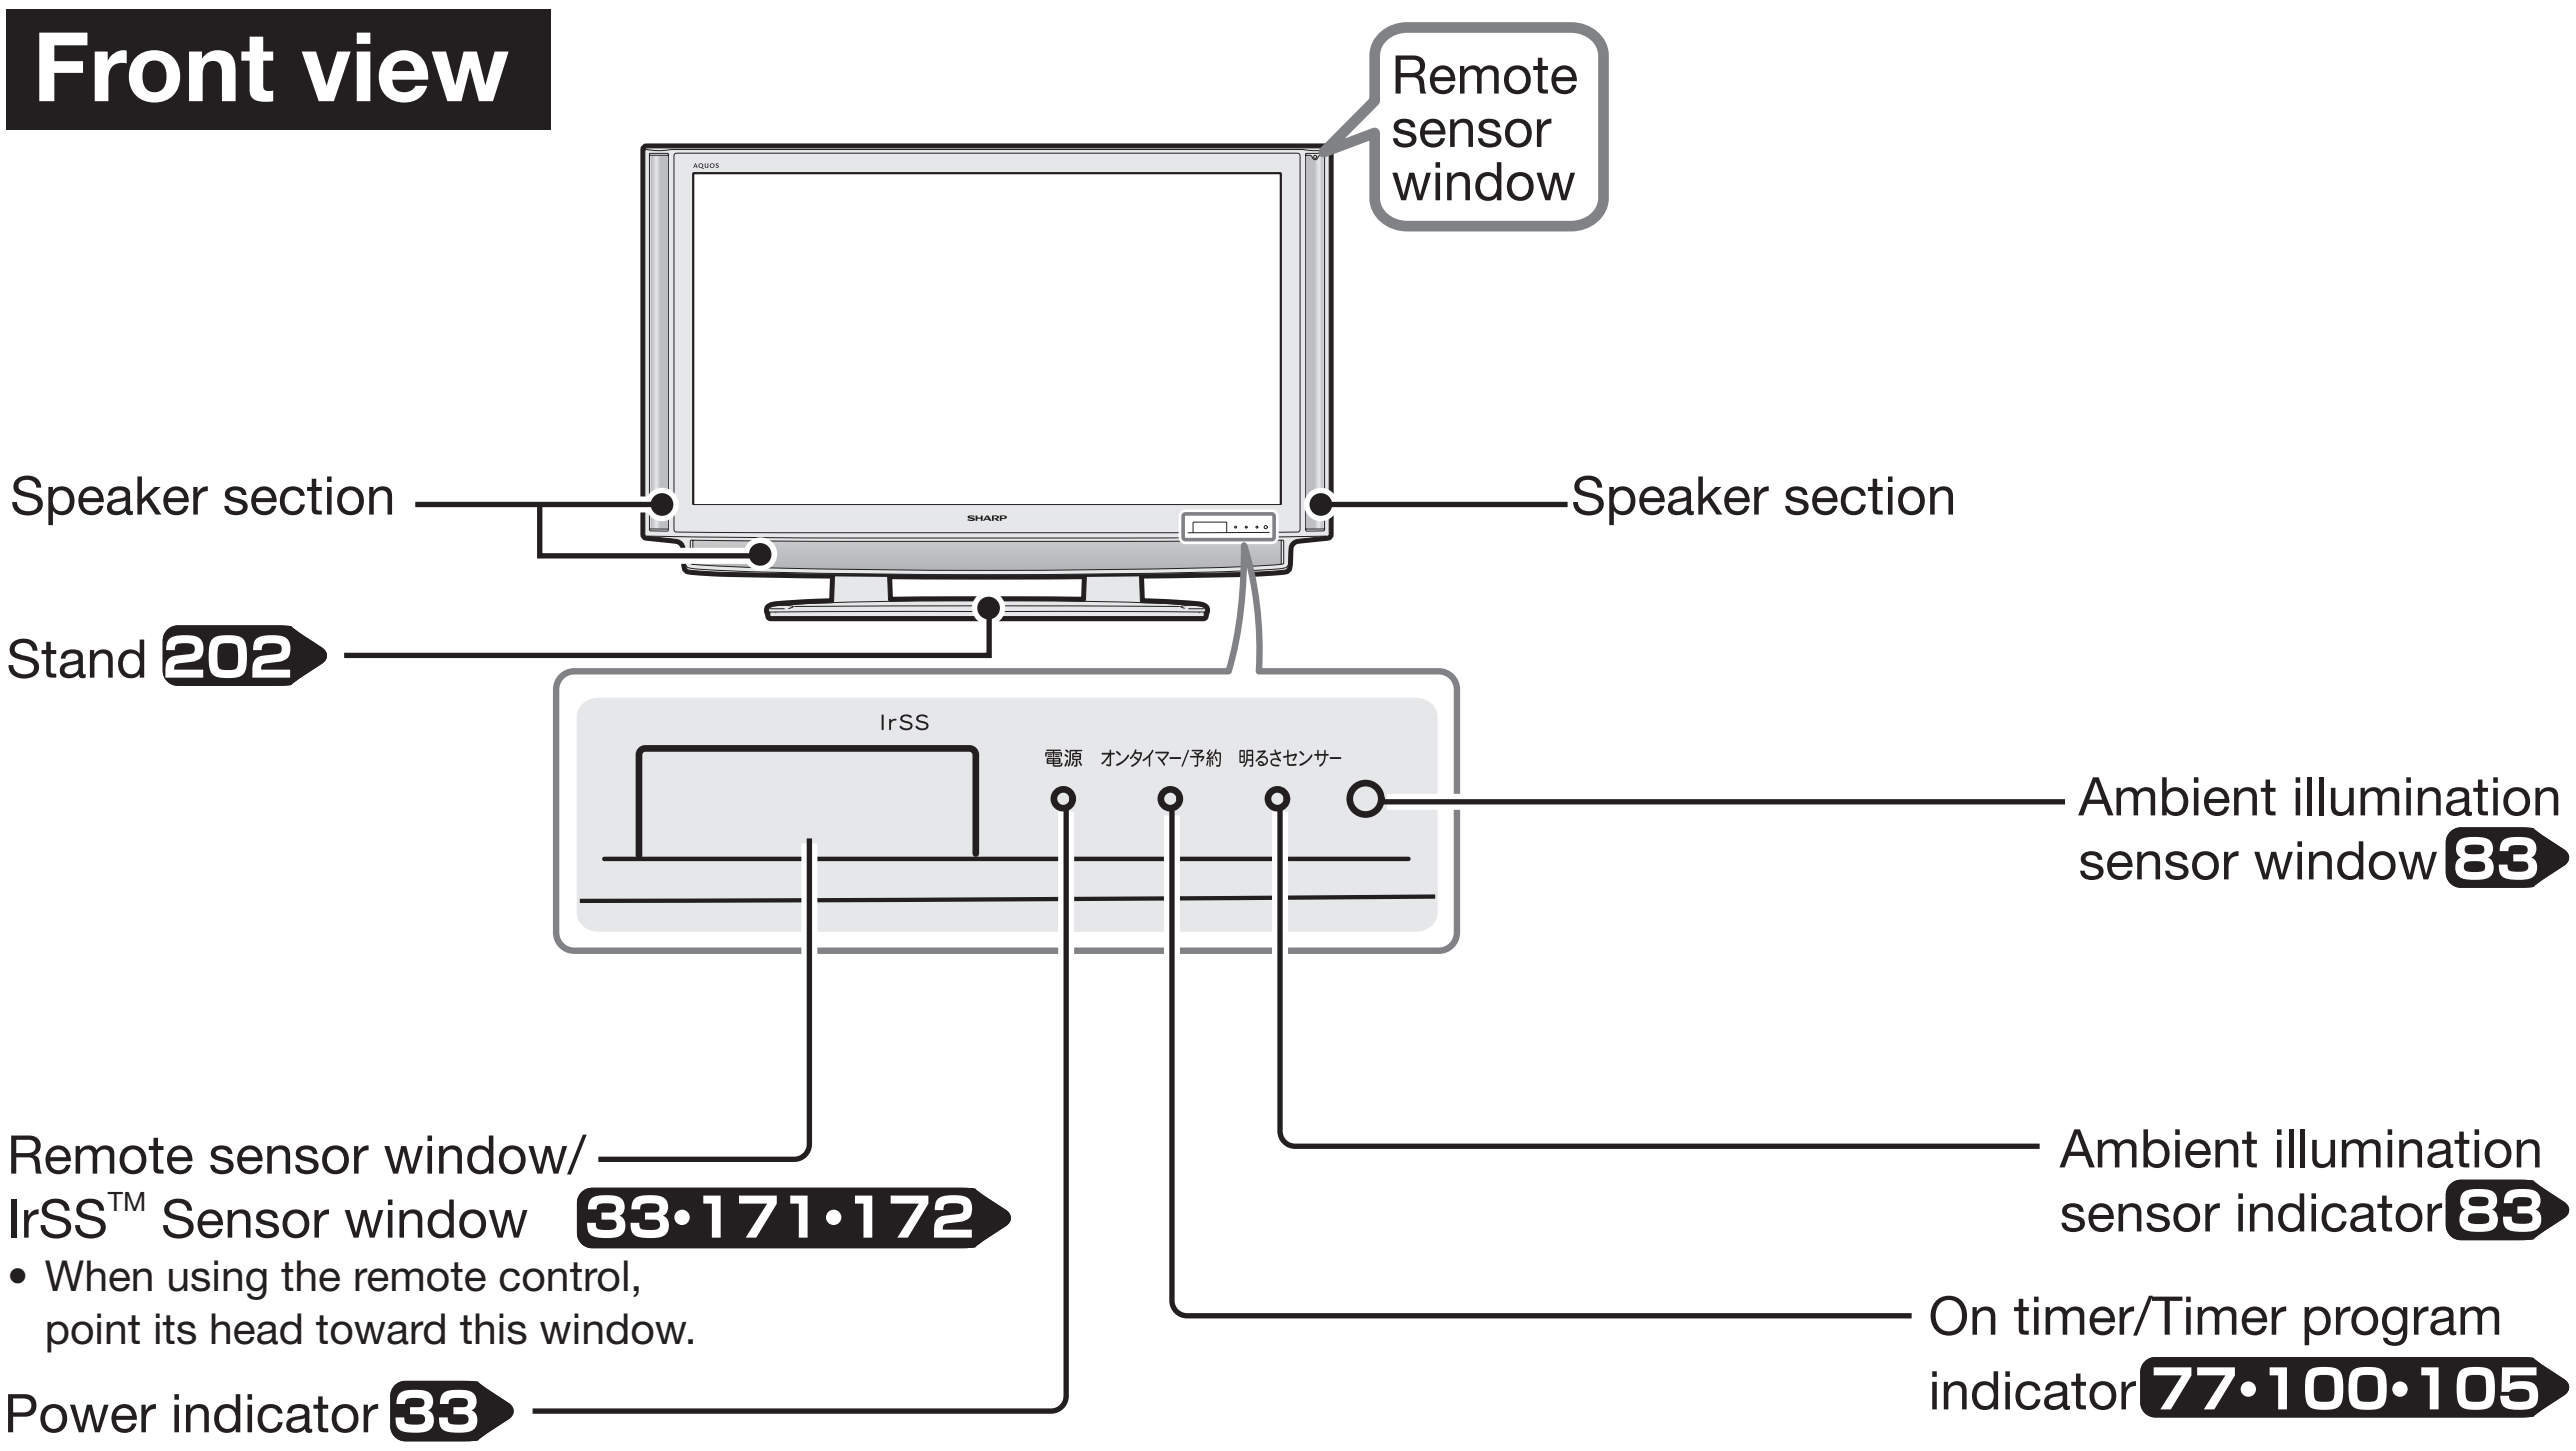


Side view

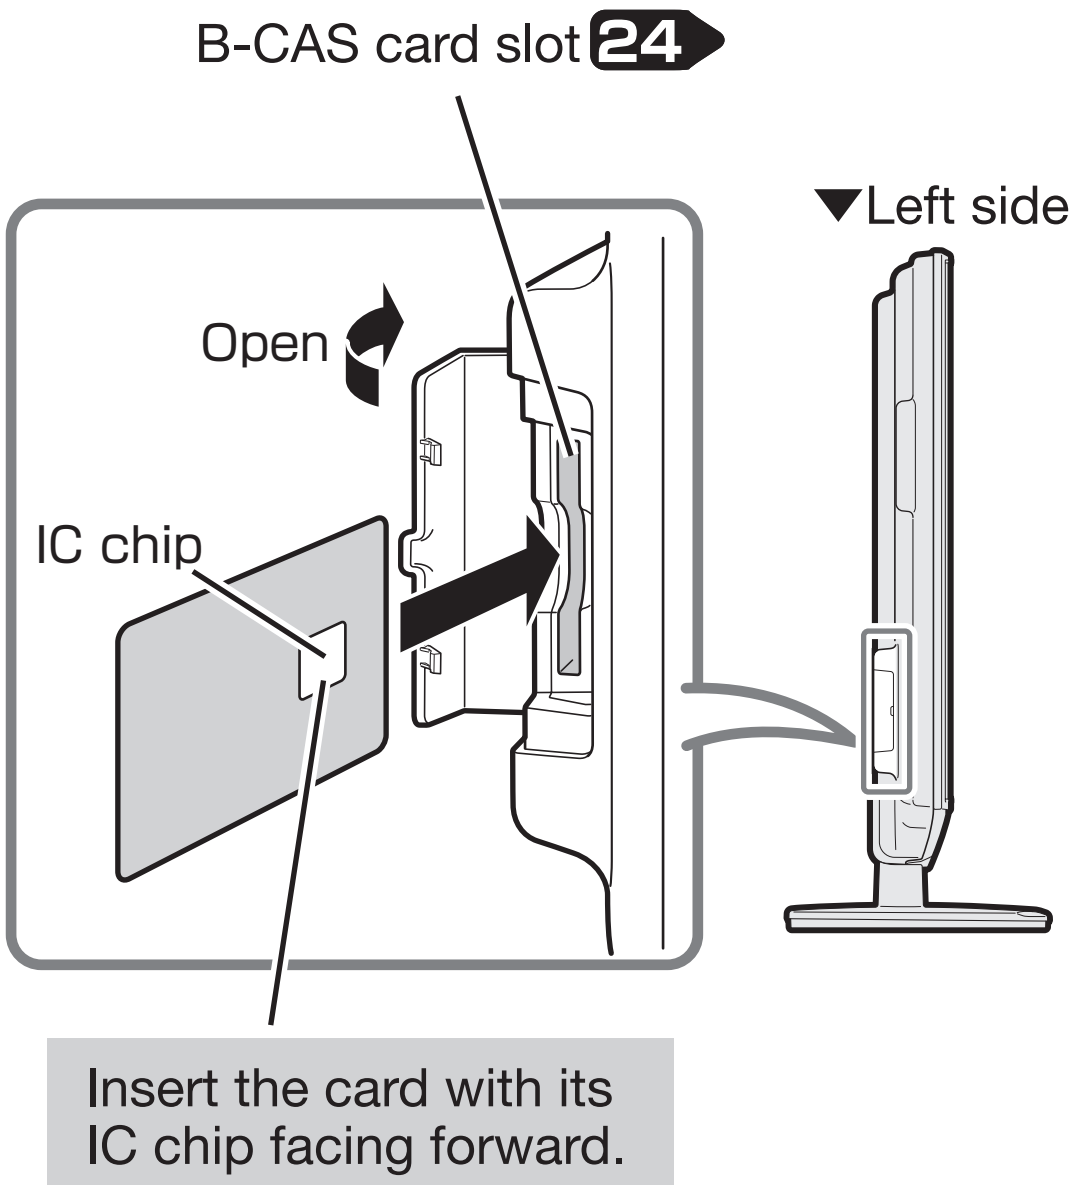

Opening the terminal covers

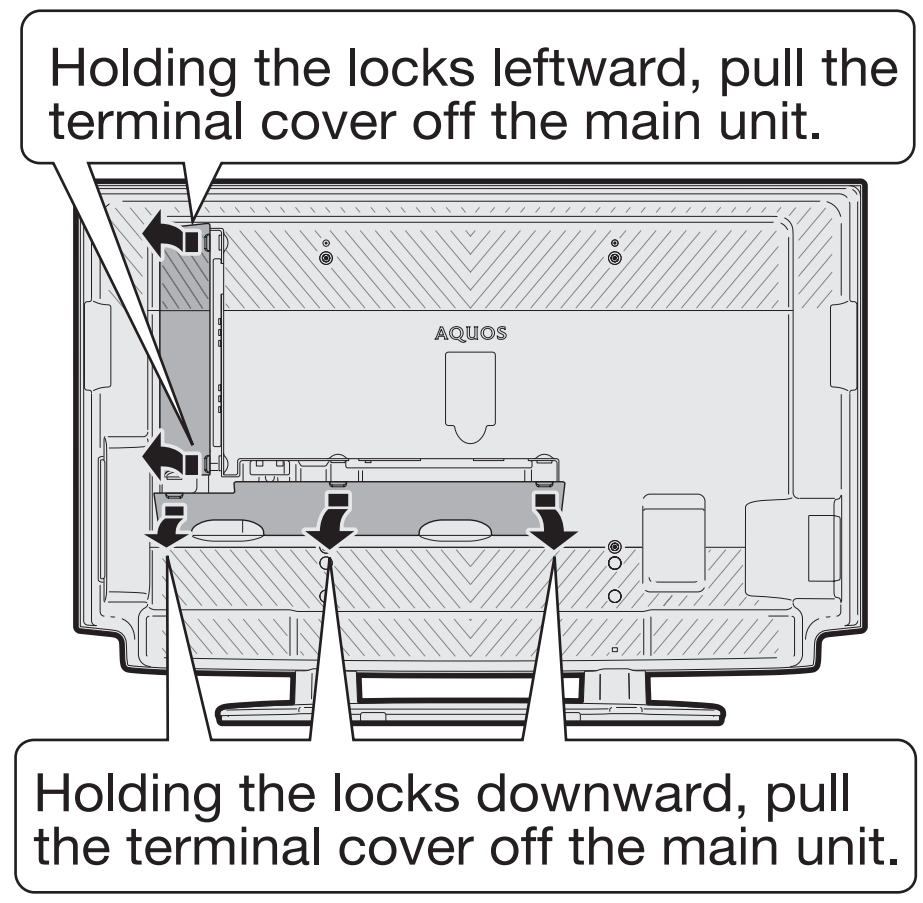


Back view

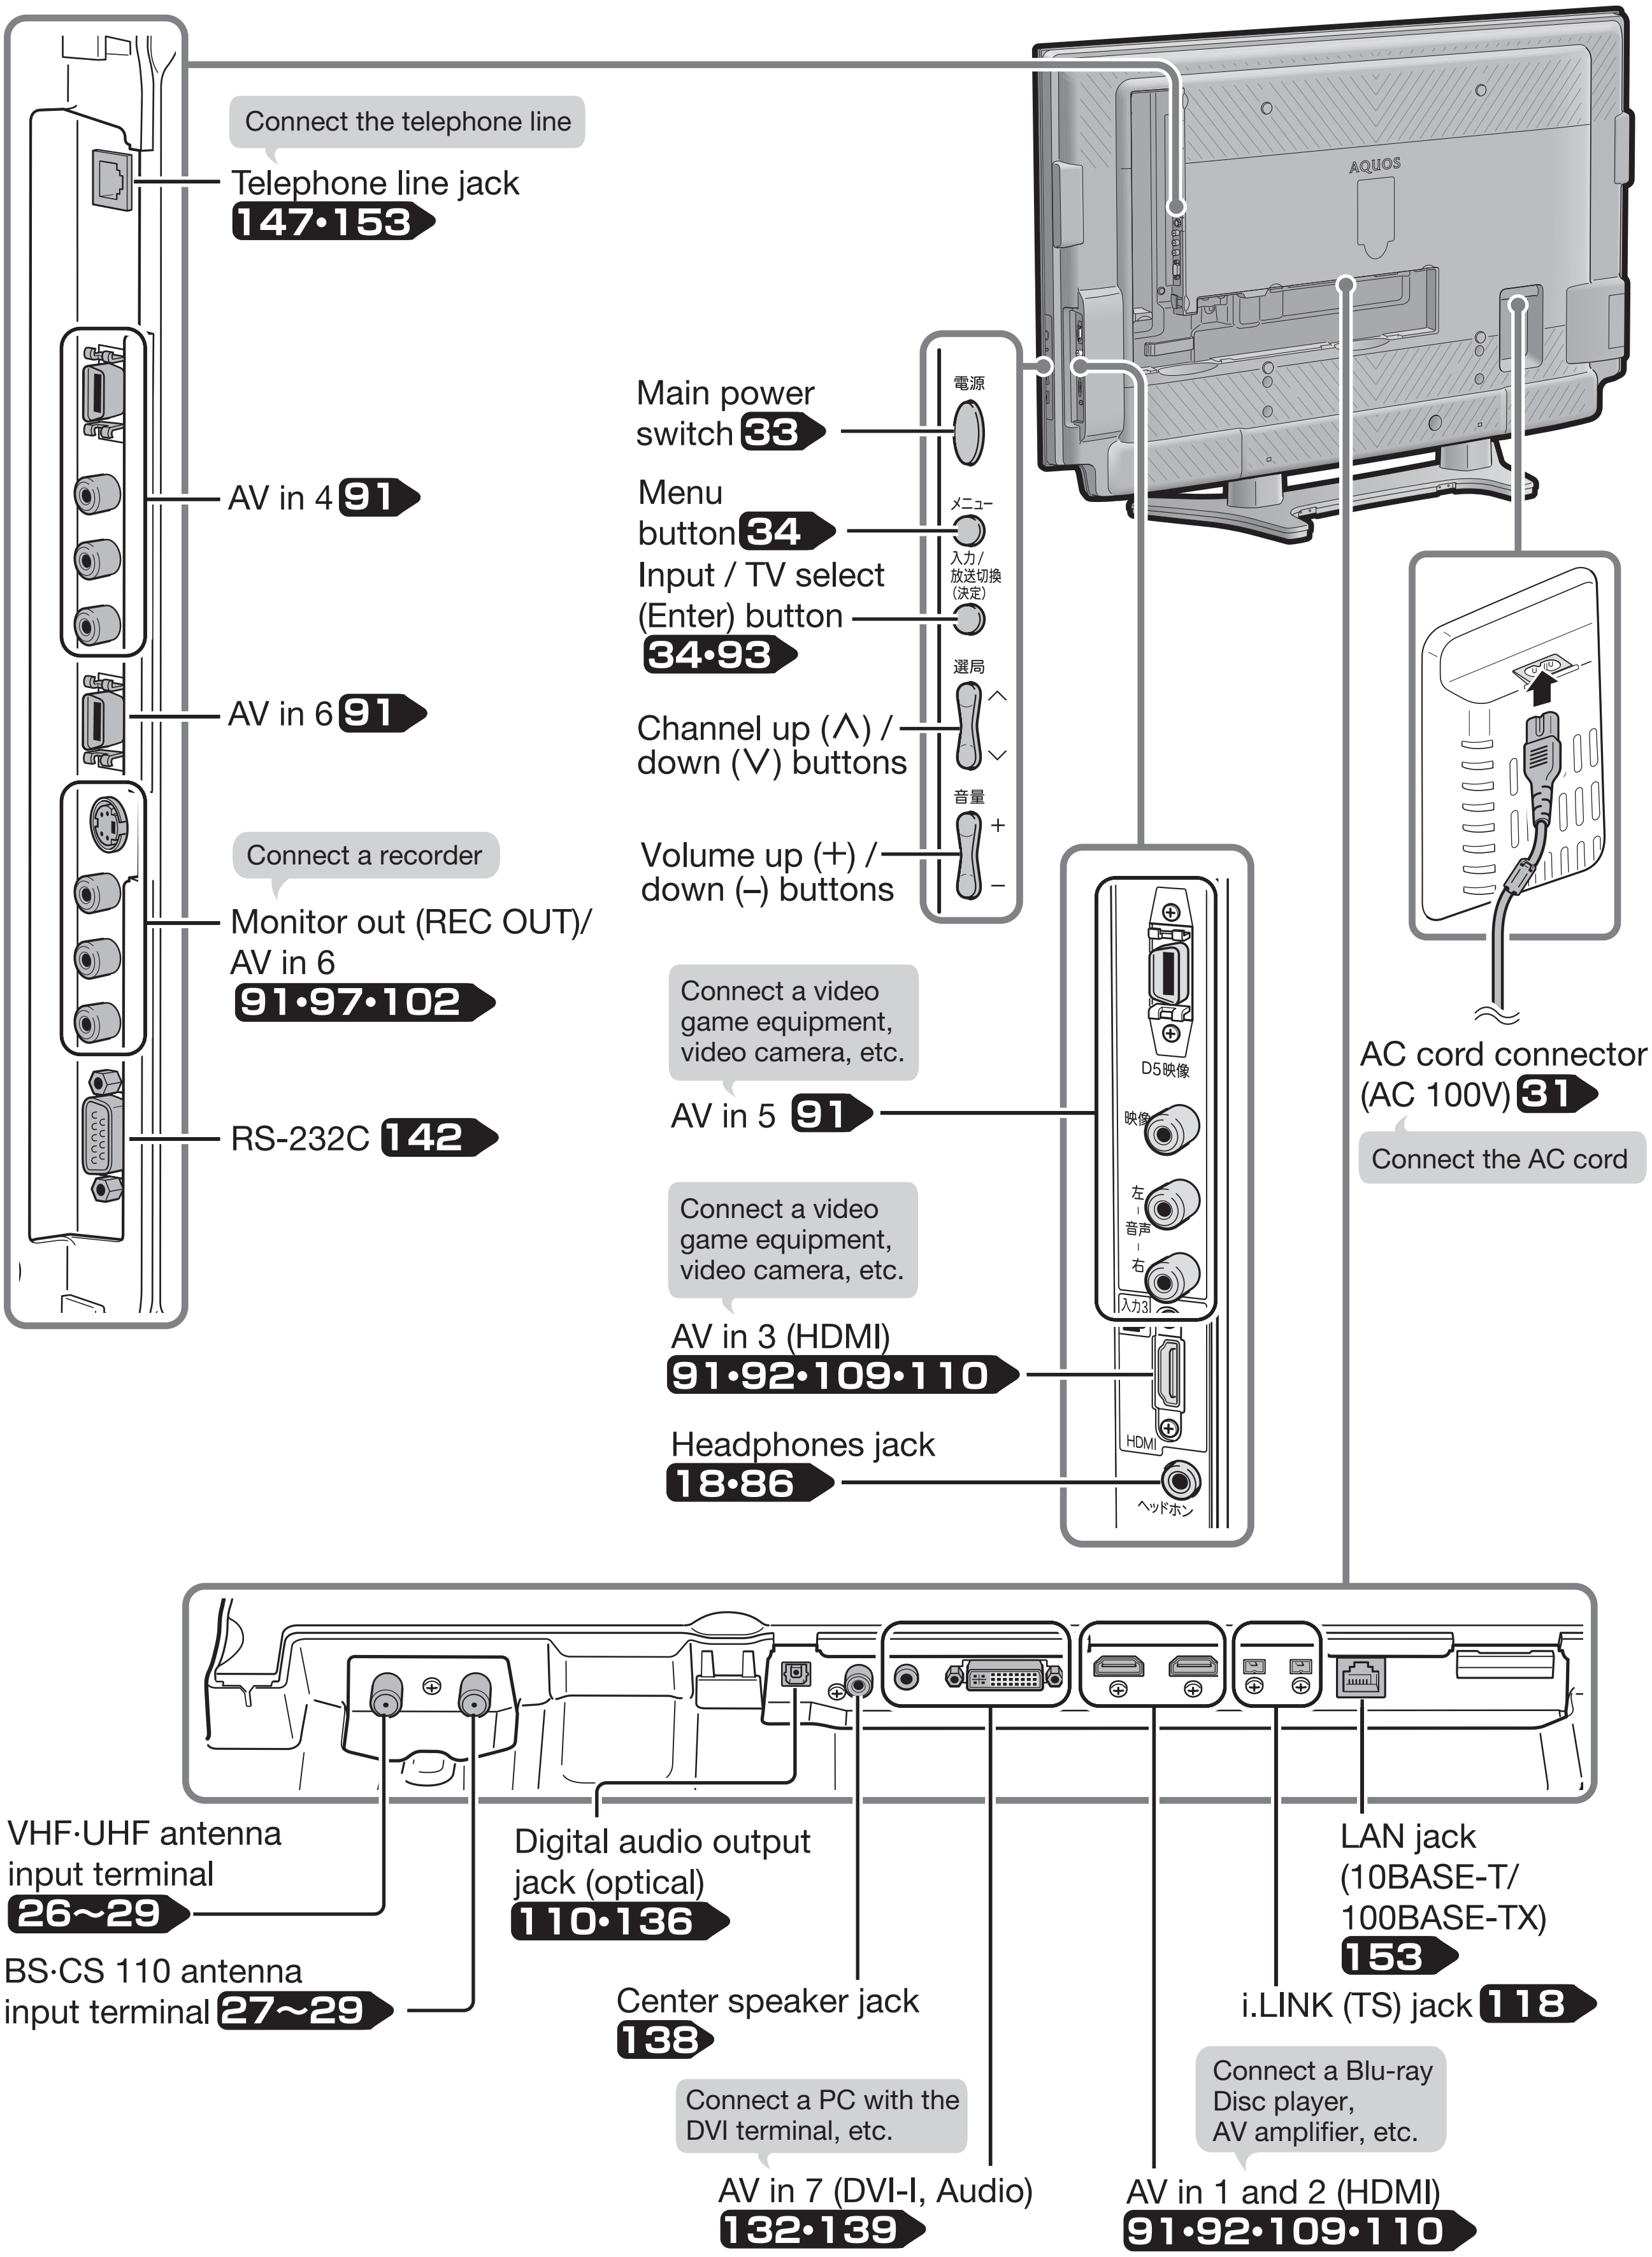

Connect the telephone line
Telephone line jack 147·153
AV in 4 91
AV in 6 91
Connect a recorder
Monitor out (REC OUT)/ AV in 6 91·97·102
RS-232C 142
Main power switch 33
電源
Menu button 34
メニュー
Input / TV select (Enter) button 34·93
入力/放送切換(決定)
Channel up (∧) / down (∨) buttons
選局
Volume up (+) / down (–) buttons
音量
Connect a video game equipment, video camera, etc.
AV in 5 91
D5映像
映像
左 音声 右
入力3
Connect a video game equipment, video camera, etc.
AV in 3 (HDMI) 91·92·109·110
HDMI
Headphones jack 18·86
ヘッドホン
AC cord connector (AC 100V) 31
Connect the AC cord
AQUOS
VHF·UHF antenna input terminal 26~29
BS·CS 110 antenna input terminal 27~29
Digital audio output jack (optical) 110·136
Center speaker jack 138
Connect a PC with the DVI terminal, etc.
AV in 7 (DVI-I, Audio) 132·139
LAN jack (10BASE-T/ 100BASE-TX) 153
i.LINK (TS) jack 118
Connect a Blu-ray Disc player, AV amplifier, etc.
AV in 1 and 2 (HDMI) 91·92·109·110

Part Names – Remote Control Unit

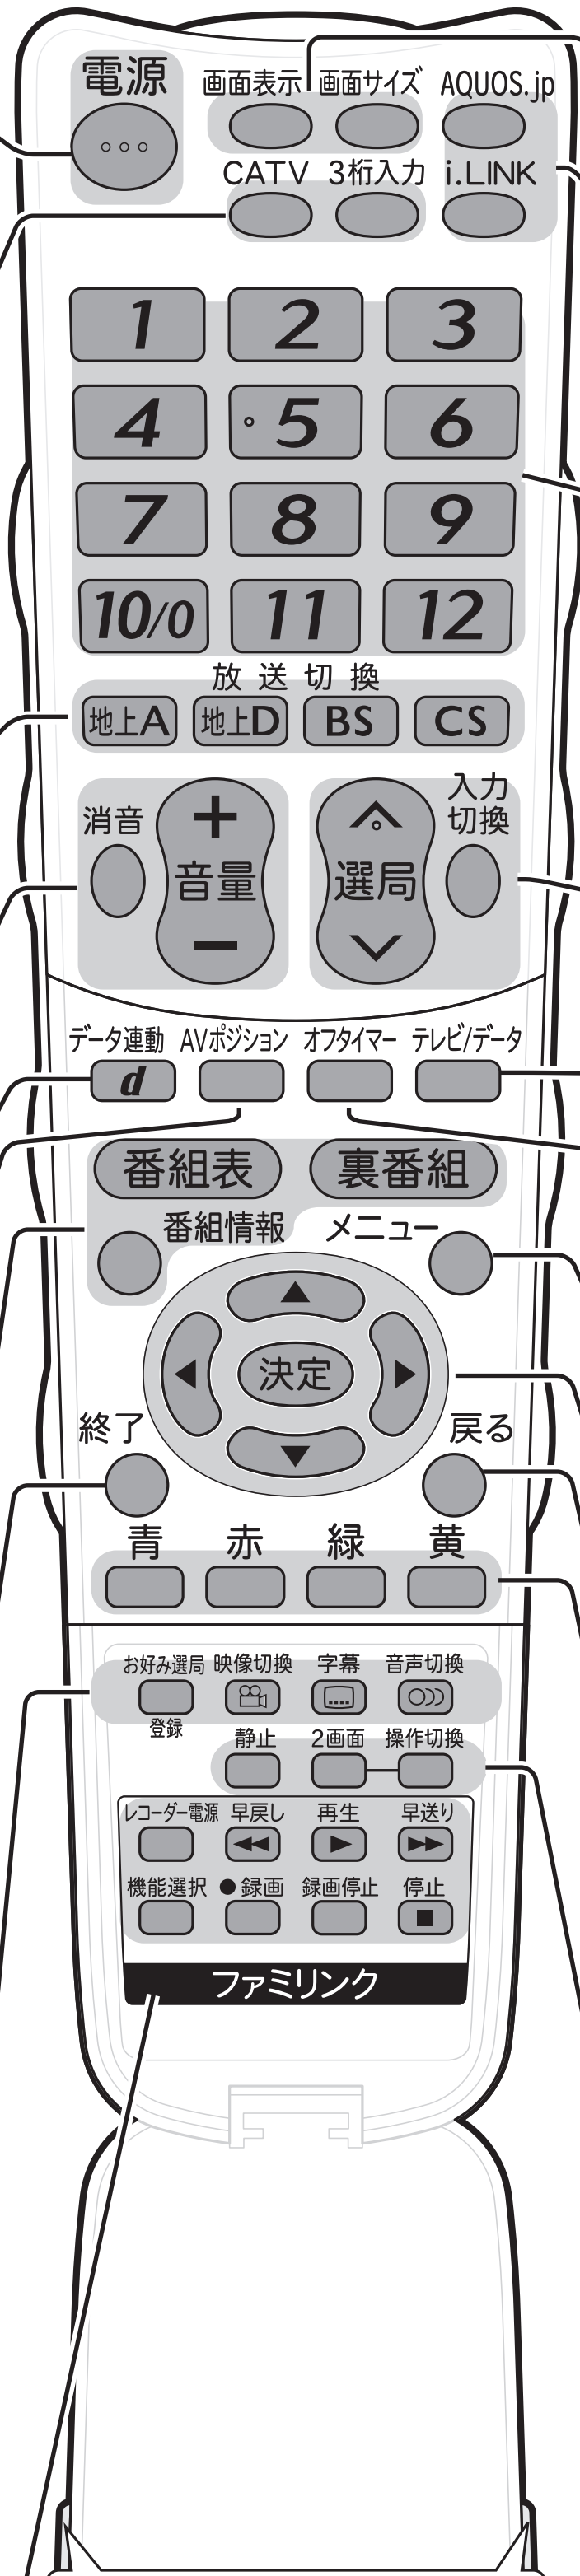

Active/Standby 33
Press to engage the TV set in the active or standby mode.

CATV **CATV 63**
When selecting a CATV channel by entering the channel number, press this button first, then enter the 2-digit number with the TV channel select buttons (1-10/0).

3桁入力 **Digital channel number input 63**
Use to select a digital channel by entering the 3-digit channel number.

地上A **Terrestrial analog select 60**

地上D **Terrestrial digital select 60**

BS **BS select 60**

CS **CS select 60**
Select the CS digital channel for the first time. 39

消音 **Mute 61**
Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

音量 **Volume up (+)/down (–) 61**
Press to adjust the volume.

Linked data broadcast 76
Press to call the data broadcast linked with the current digital TV program.

AV mode select 81
Press to select the picture/sound setting that best matches the current program.

番組表 **EPG 66・68**
Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

裏番組 **Other on-air programs 67**
Press to display the EPG for currently on-air programs only (裏番組).

番組情報 **Program info 76**
Press to display detailed information on the current digital program.

Finish 34
Press to finish menu operation, etc.
* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

お好み選局 登録 **Favorite channel select/register 63**
Press to select a user-registered channel and to turn on/off the favorite channel register/registered channel table screen.

映像切換 **Picture select 73**
Press to select the desired picture when watching a digital multi-picture program.

字幕 **Caption 73**
Press to display, select, or turn off captions when watching a digital program with captions.

音声切換 **Audio select 72・73**
Press to select the desired audio.

Familink 112・114~117
Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

画面表示 **Display 62**
Press to display or turn off the channel call, etc.

画面サイズ **Screen mode 79・133**
Press to select the desired screen mode.

AQUOS.jp **AQUOS.jp 156**
Press to connect to the internet.

i.LINK **i.LINK 120**
Press to display the i.LINK control panel.

Channel select 61
- Press to select a channel.
- Use to input a number for various settings.

選局 **Channel up (∧)/down (∨) 61**
Press to select channels in the current network, media and CATV channels in the ascending or descending order.
* CATV channels are factory set to be skipped.

入力切換 **Input select 93**
Press to select the desired input.

Media select 60
Press to select the desired media (TV or data).

Sleep timer 178
Press to select the desired remaining time period after which the TV set is automatically turned off and enters the standby mode.

Menu 34
Press to display or turn off the menu screen.
The menus can be displayed in English. See 213 for instructions on how to switch the display language.

Cursor (up, down, left, right) 34
Use to select a menu item, column, etc.

決定 **Enter/Confirm 34**
Press to confirm a selected setting or menu item.

Return 34
Press to go back to the previous screen. Press this button instead of the Enter/Confirm (決定) button when you have selected the wrong item or input the wrong number, etc.

青 赤 緑 黄 **Color 68・69・76**
Use to operate EPGs and data program screens.

静止 **Freeze 75**
Press to freeze the picture.

2画面 **Split screen 74**
Press to switch between the split screen mode and the normal screen mode.

操作切換 **Operable screen 74**
Press to switch the operable screen when the TV set is in the split screen mode.

To open the cover
Hold the cover by the projections on both sides and lift upwards.



Switching the Display Language to English
メニューなどの言語を英語にする

● Using the menu screen, you can switch the on-screen display language to English.

メニューなどの画面表示を英語にすることができます。



おしらせ

誤ってメニューを英語にしてしまったときは

- メニューから「Setup」－「言語設定(Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

Press

1 メニュー


Display the menu screen.
メニューを表示する

2

Select " **本体設定** "(Setup) ー "Language (**言語設定**)".

「本体設定」－「Language（言語設定）」を選ぶ


決定 Enter.
決定する

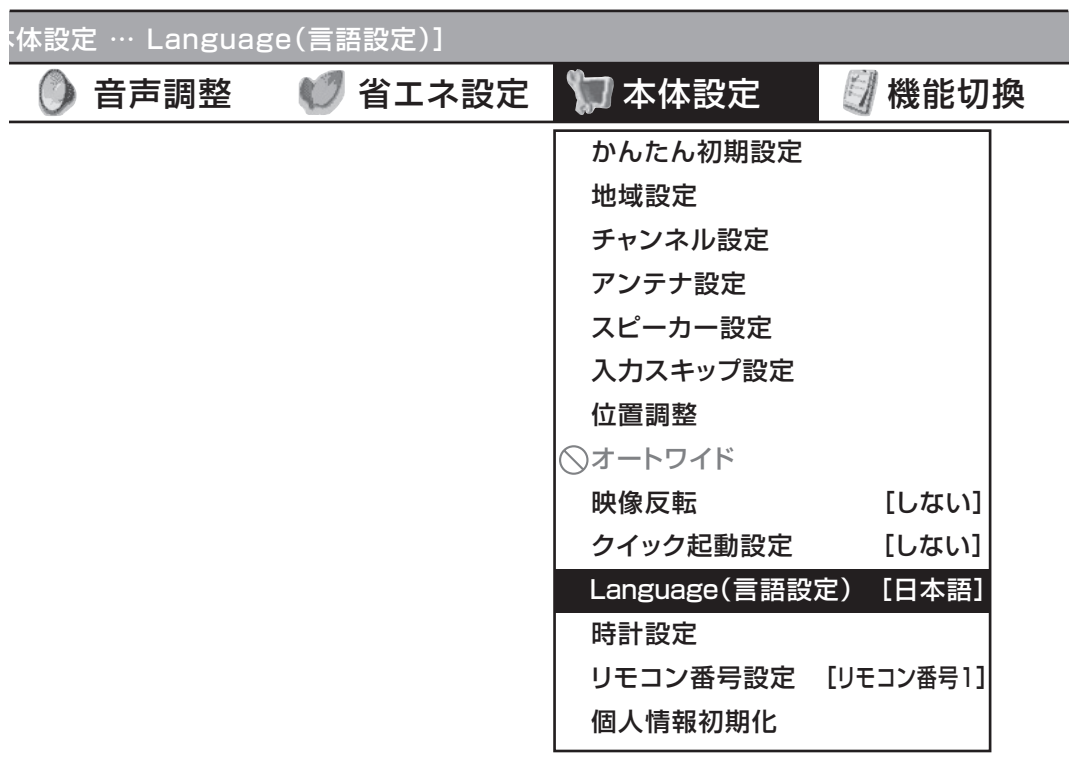

3

Select "English".
「English」を選ぶ

決定 Enter.
決定する

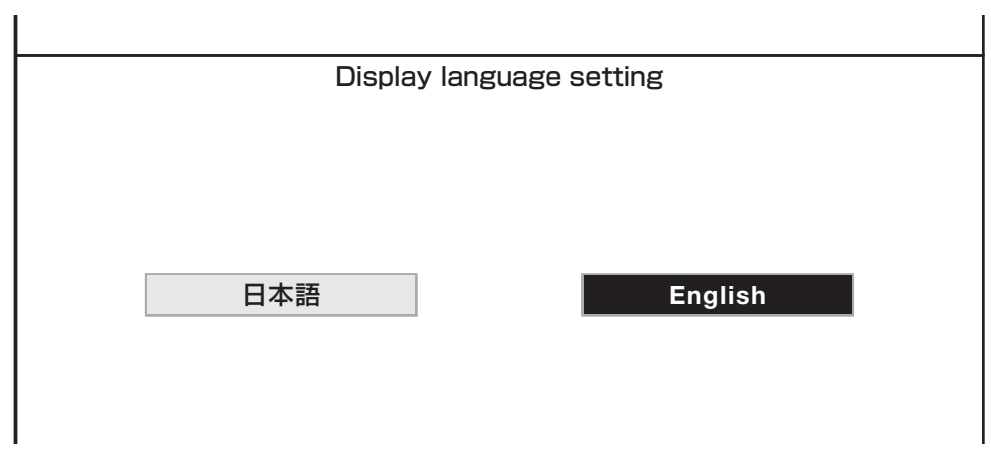

- The menu screen is now displayed in English.
- 画面表示が英語になります。

4 終了

Finish this operation.
終了する